

Stückliste / Packing list

AGG3.151 / AGG3.152

			DE	EN
AGG3.151	AGG3.152	Anschluss- bezeichnung ----- Terminal designation	Beschreibung	Description
			RAST5	RAST5
1	10	X5-02	Druckwächter-max (Pmax) / POC, Brennstoff 1	Pressure switch-max (Pmax) / POC, fuel 1
1	10	X6-02	Sicherheitsventil (SV) / Magnetkupplung, Brennstoff 1	Safety valve (SV) / magnetic clutch, fuel 1
1	10	X7-02	Brennstoffventil 3 (V3)	Fuel valve 3 (V3)
1	10	X8-02	Brennstoffventil 1 (V1), Brennstoff 1	Fuel valve 1 (V1), fuel 1
1	10	X8-03	Brennstoffventil 2 (V2), Brennstoff 1	Fuel valve 2 (V2), fuel 1
1	10	X22-02	Druckwächter-max (Pmax) / POC, Brennstoff 0	Pressure switch-max (Pmax) / POC, fuel 0
1	10	X24-04	Brennstoffventil 1 (V1) / Brennstoffventil 2 (V2), Brennstoff 0	Fuel valve 1 (V1) / fuel valve 2 (V2), fuel 0
1	10	X24-05	Pilotventil (PV), Brennstoff 0	Pilot valve (PV), fuel 0
1	10	X24-06	Sicherheitsventil (SV), Brennstoff 0	Safety valve (SV), fuel 0
1	10	X31-01	Spannungsversorgung, Brennstoffwahlschalter	Voltage supply, fuel selector switch
1	10	X31-02	Brennstoffwahlschalter	Fuel selector switch
1	10	X32-01	Verbindungsstecker zu Grundgerät LMV26...	Connecting plug to basic unit LMV26...
1	10	X32-02	Leistungsregler extern	Load controller external